Specifications

- Operating Voltage» 12~24VDC/AC
- Voltage Tolerance» ±10%
- Current Draw» 210mA/12VDC; 150mA/24VDC
- Version Changeable» Fail-safe or Fail-secure
- Operating Temperature» -10~45°C
- Humidity» 0~95% non-condensing
- Lock bolt sensor switch output» SPDT rated 3A/125VAC
- Solenoid testing» Tested up to 1,000,000 cycles
- Net Weight» 594g
- Applicable to horizontal and vertical installation
- VGL bracket can be adjusted depending on the door gap ranging from 8 mm to 12 mm.





Double swing door


Double Swing Doors


Outswing

Inswing


Installation Instructions


Unit:mm

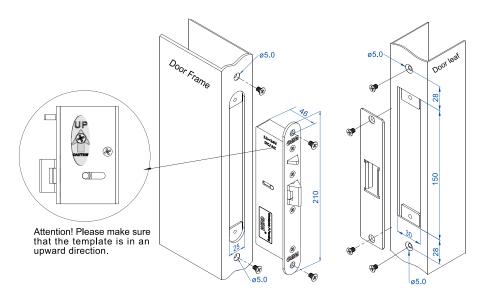


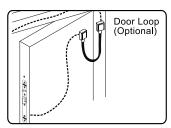

The door loop protects the wiring from damage at the door hinge.

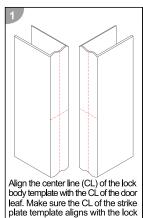


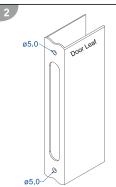

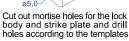





Tighten the fixing lugs with screws.

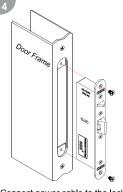

Connect power cable to the lock and test before screwing to the door leaf.

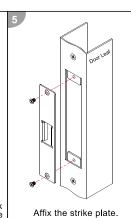


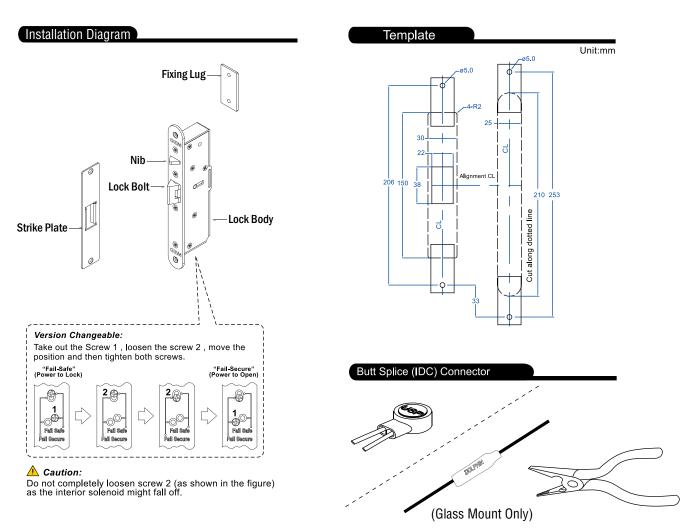

Use crimper or pliers and press the header of connector down to even position.


Wiring Diagram

Lock bolt sensor status output

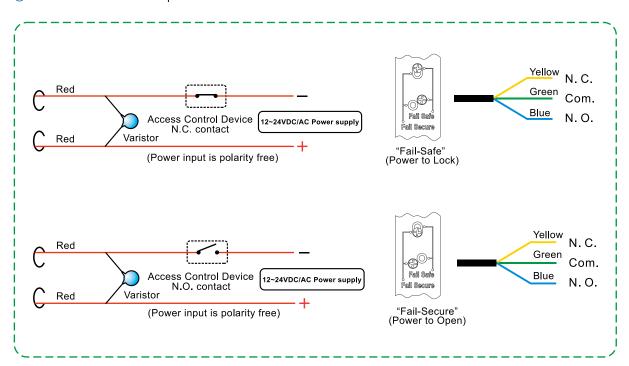


NOTE: The varistor (or diode) must be connected across the terminals of electric locks. This protects the electromechanical locks from spikes and surges.


Dimensions (Glass Mount & Surface Mount)

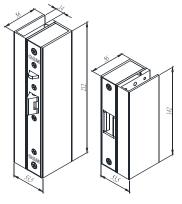

Lock Model: ML-210N-SW-VGL (Including SMB-210 and UBK-210)

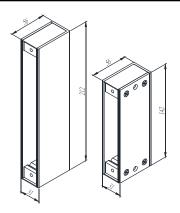



Bracket Model : SMB-210 (For Surface Mount)

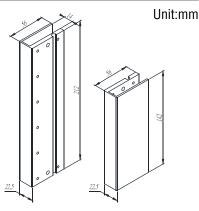

Bracket Model : UBK-210 (For Glass Mount)

Surface Mount Installation

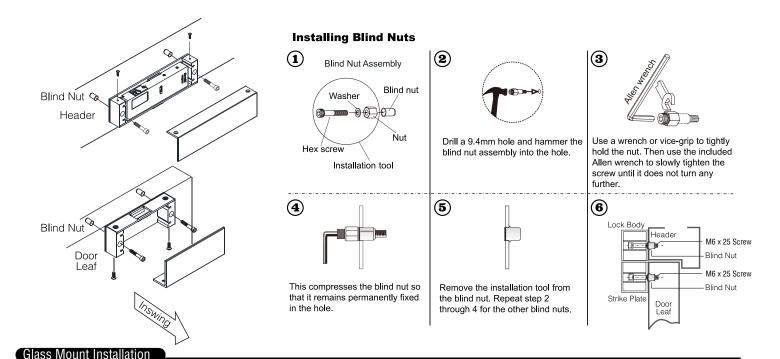

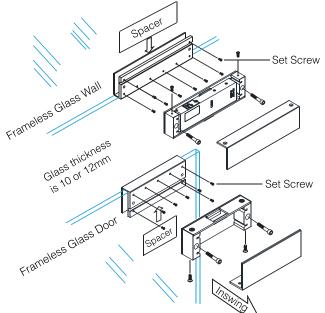

Installation Instructions

- 1.Make sure the installation location and clean the surface of glass.
- 2.Take off the sticker on the back of the spacer and attach the spacer to glass.Add mor spacers if needed according to glass thickness.Use silicon to secure the VGL bracket firmly.
- 3.Tighten the set screws with the Allen wrench, secure the electromechanical lock to the glass bracket, and then install the cover.

Caution:

- 1.It is suggested to attach the spacer to inside of the door.
- 2. Tighten the set screws lightly to prevent breaking the glass.
- *3.NIB must face towards the outside of the door during installation.*
- 4.The glass thickness should be $10 \sim 13$ mm. The bracket can be adjusted to properly align the position of strike plate and lock body depending on the door gap ranging from 8 to 12 mm.

