
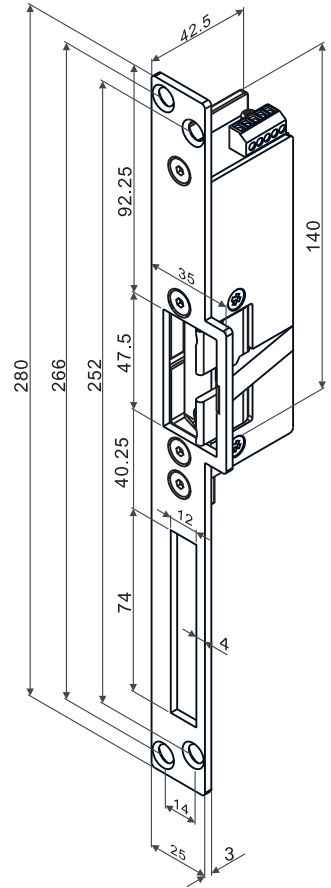


# GK236M Series Electric Strike Installation Instructions (For Wood Doors)


## Specifications

- Operating Voltage: 24/48 VDC
- Voltage Tolerance:  $\pm 10\%$
- Current Draw: 170mA/12VDC ; 85mA/24VDC
- Operating Temperature:  
+ 14°F to + 120°F(-10°C to +49°C)
- Humidity: 0~85% non-condensing
- Solenoid Testing: Over 250,000 cycles
- Preload: Up to 500 lbs
- Construction: Stainless steel
- Net Weight: 645g
- Latch Throw: 11mm (With 3mm door gap)
- Keeper Width: 48mm
- Lock Mode: Fail-safe

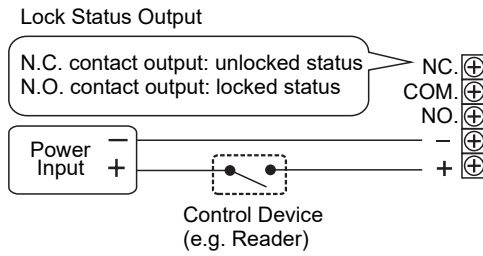

Unit: mm

## Keeper Adjustment

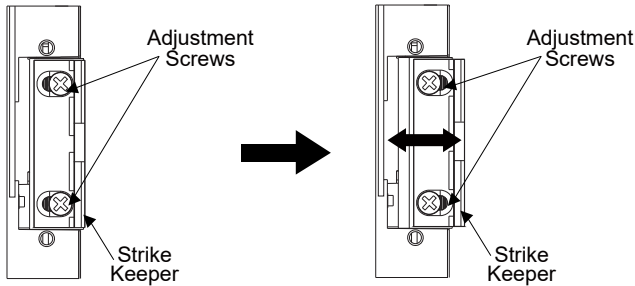


The strike keeper can be adjusted horizontally to account for various installation anomalies. To adjust the keeper, loosen the adjustment screws, move the keeper horizontally as needed, and retighten the adjustment screws.

**(Maximum adjustable range: 3mm)**

## Handing Guide

Door handing is determined from the side of the door where the hinges are visible, according to the German standard DIN 107.

Stand facing the door on the hinge / pull side. If the hinge is on the right, the door is considered to be DIN right. If the hinge is on the left, then the door is considered to be DIN left.

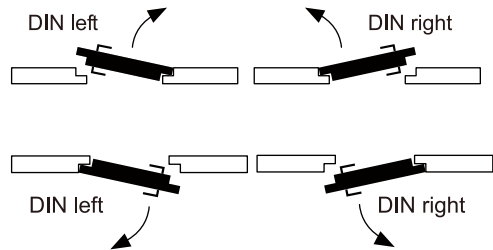

### Voltage Selection Jumpers

Check jumper settings before connecting the lock to 48VDC input power. Damage to the lock may result from incorrect jumper settings.

## Installation Steps

