



DL-370 Power Transfer Door Loop Installation Instructions


Installation Steps

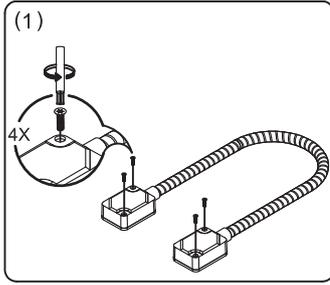


Remove the security screws using the enclosed tool.

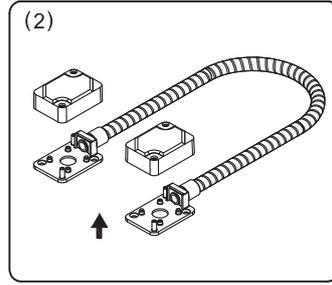

Remove the head covers.

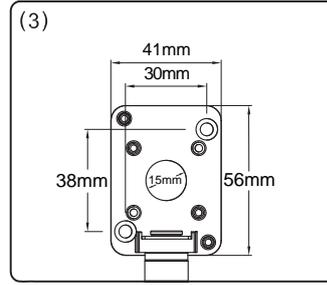


Position the two end caps where you plan to mount them and mark the holes on the door and frame.

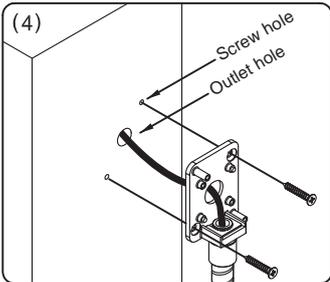


Drill holes in the marked positions, and secure the two ends by using 4x25 screws.

Screw hole diameter: 3.3mm
Outlet hole diameter: 12mm

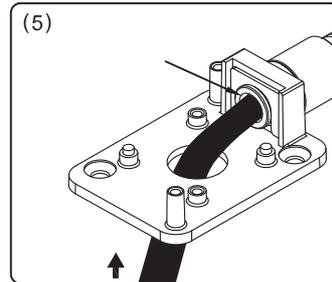


Connect the wire to each end of the loop and test the unit.

Inside diameter: 9mm

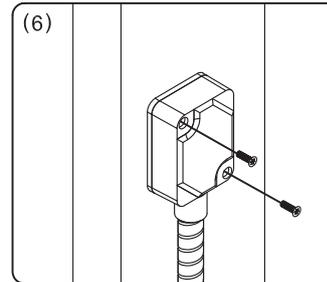


Mount the head covers and tighten the screws.

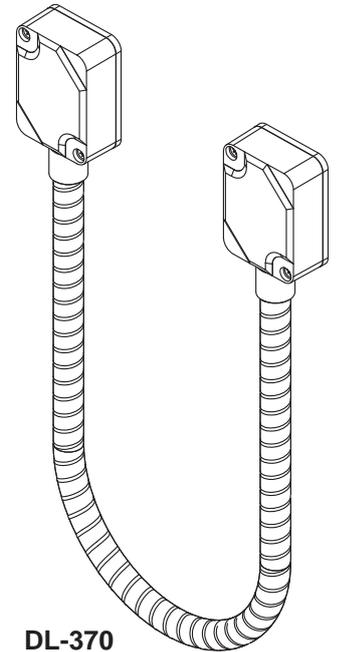


DL-370

DL-370 Power Transfer Door Loop Installation Instructions


Installation Steps

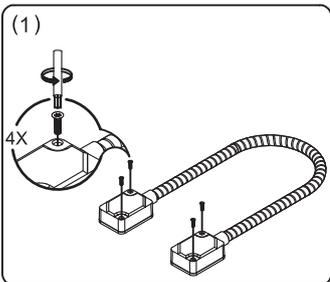


Remove the security screws using the enclosed tool.

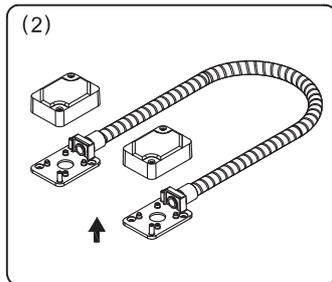

Remove the head covers.

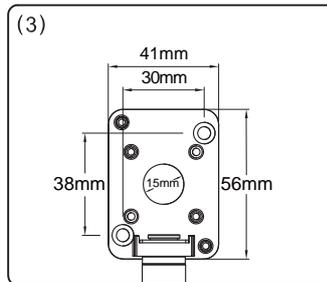


Position the two end caps where you plan to mount them and mark the holes on the door and frame.

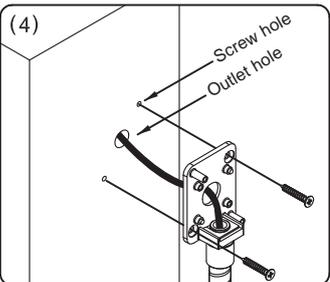


Drill holes in the marked positions, and secure the two ends by using 4x25 screws.

Screw hole diameter: 3.3mm
Outlet hole diameter: 12mm

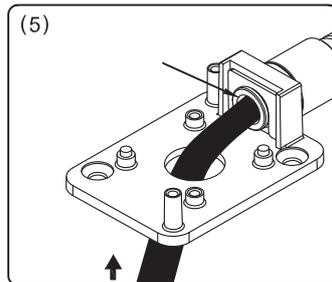


Connect the wire to each end of the loop and test the unit.

Inside diameter: 9mm

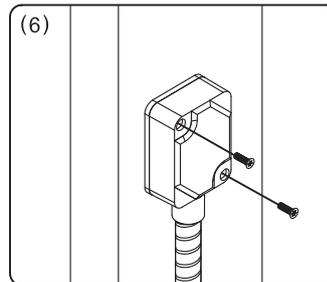

Mount the head covers and tighten the screws.

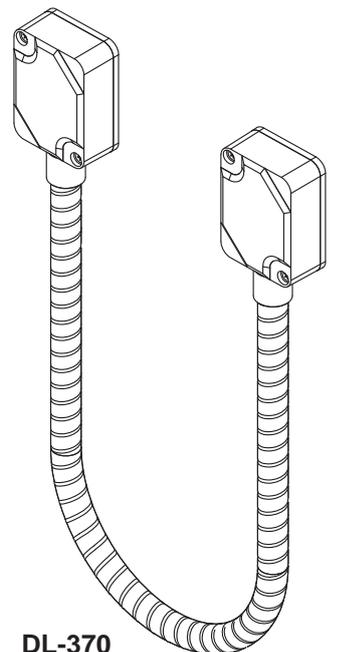

DL-370