

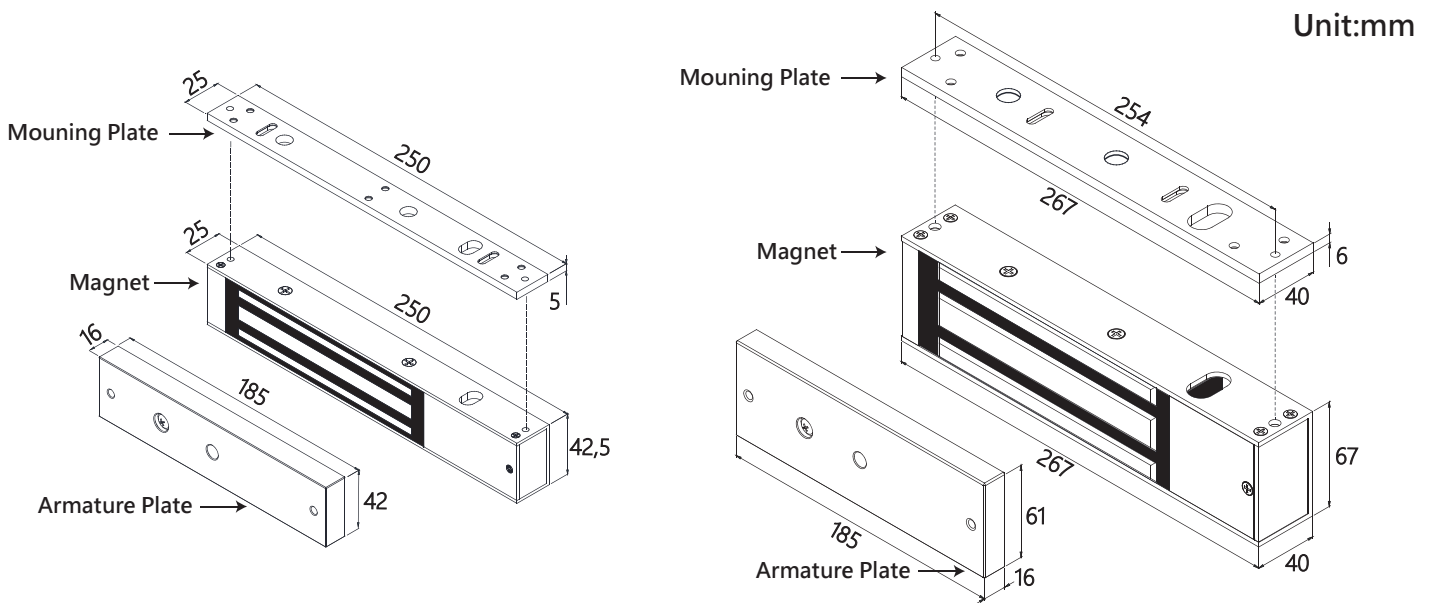
10001 & 10010-254 Series

Electromagnetic Lock Installation Instruction (Indoor Series)

A Technical Specification


Specification		Model	UL1034 Rating	UL294 Performance Level
Operating Voltage	12/24VDC			
Current Draw	500mA/12VDC 250mA/24VDC	10001	Static force: 500 lbs Dynamic force: 50 ft-lb Endurance: 250,000 Cycles	Destructive Attack: Level I Line Security: Level I Standby Power: Level I
Operating Temperature	32° to +120.2°F (0° to +49°C)	10010-254	Static force: 1000 lbs Dynamic force: 70 ft-lb Endurance: 250,000 Cycles	Standby Power: Level I Endurance: Level IV
Holding Force	600 lbs for 10001 1200 lbs for 10010-254	UL Requirements		
Lock Surface Temperature	≤ Ambient temperature ± 20°C			
Lifetime Test	—	<ul style="list-style-type: none"> UL1034/UL294 indoor use. UL864 indoor dry use. The power for the 10001/10010-254 Series is to be provided by a Listed (UL 294, UL 603 and CAN/ULC-S533, also UL 864 or UL 1481 for standalone power supply) Class 2 Power Supply. The 10001/10010-254 Series is intended to be used in combination with access control and/or commercial fire alarm panel. which are installed in accordance with the manufacturer' s Installation and operation instructions, ANSI/NFPA 70 & NFPA 72 and the local authority having jurisdiction. 		
Waterproof Grade	—			
Humidity	0 to 93% Non-condensing			
Finish	Magnet Surface : Galvanized Housing : Brushed stainless steel(US32D)			
"The products shall not impair the intended operation of an emergency exit or panic hardware mounted on the door."				

B Dimension & Accessories




10001 Series

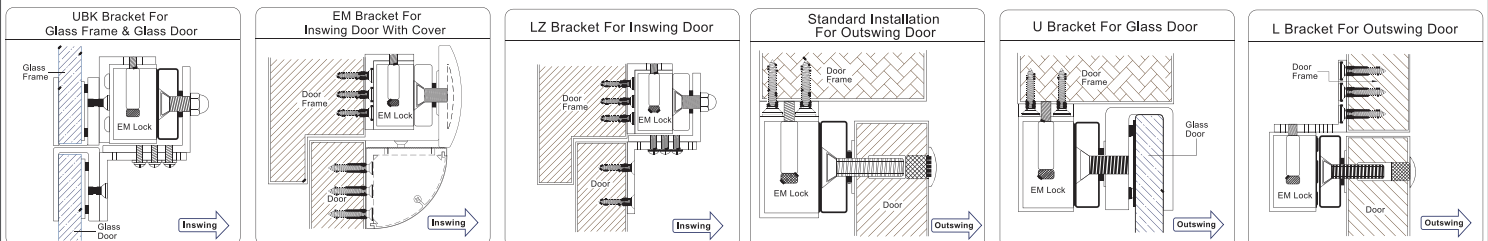10010-254 Series




C Pre-Installation Considerations

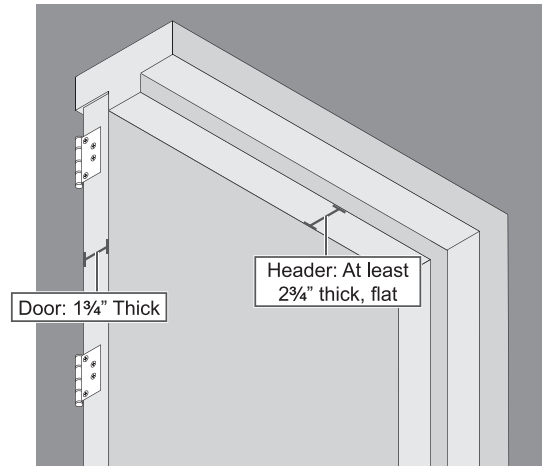
- Use **ONLY** the hardware provided for mounting this product (NOTE: Non-standard Door thickness may require different sex nut Hardware – see specific instructions for required hardware).
- Follow the installation procedure as described in this manual.
- Check door thickness. If the door is not 1 3/4" thick, a different sex nut will be required.
- Check door header. A minimum 2 3/4" thick, flat surface is needed to securely mount all screws for the magnet. If you do not have the required surface, you will need filler plates and/or angle brackets to properly mount the magnet.




D Important Notes

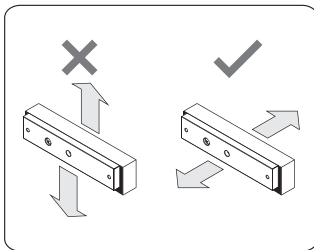

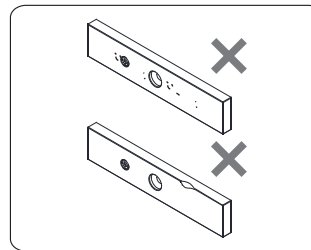
CAUTION
The electromagnet lock requires a face-to-face fitting as shown in Figure otherwise, the holding force will be greatly decreased (direction of hydraulic press pull must be collinear).



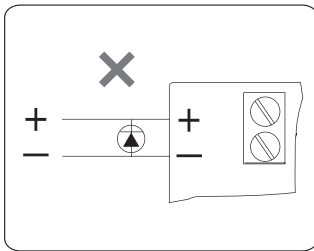Make sure the contact area of the electromagnetic lock and the armature plate are clean.



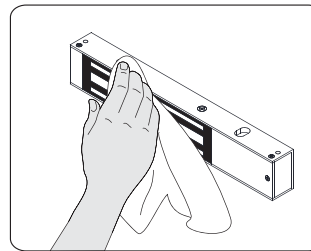
CAUTION
Remove any diode installed across the magnetic lock for spike suppression. The magnet is fitted with a metal oxide varistor to prevent back EMF.




Wipe the surface of magnet lock with anti-rust oil regularly.

E Optional Bracket

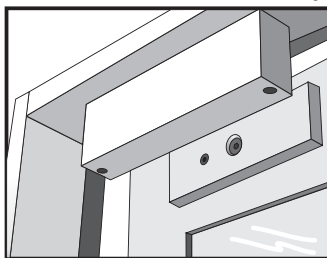
Brackets installation are according to door swing direction and door frame type, e.g. narrow frame door, frameless glass door, inswing door, etc.




Regular Installation
(outswing door)

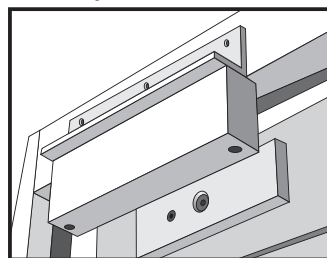

L-bracket for
narrow frames (optional)

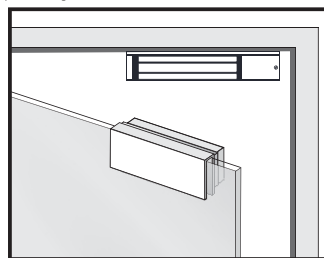

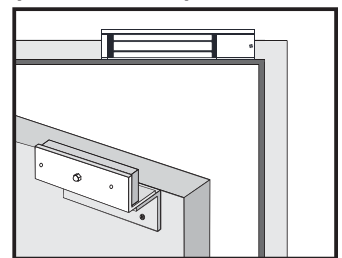U-bracket for frameless
glass doors (optional)
only outswing door.



LZ-bracket for
inswing doors (optional)

WARNING

Warnings indicate potentially hazardous conditions, which if not avoided or corrected, may cause death or serious injury.

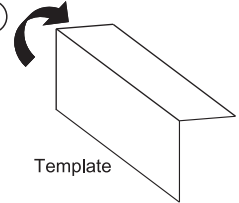
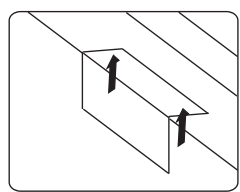
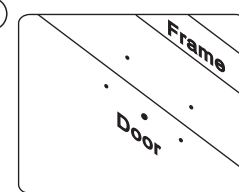
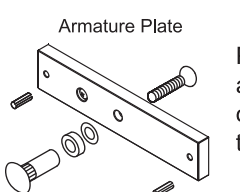
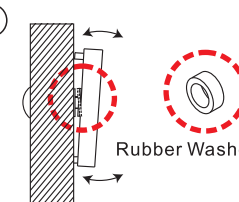
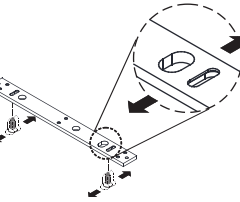
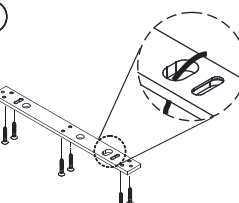
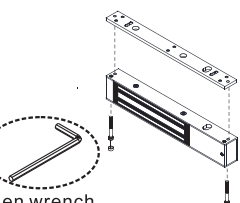
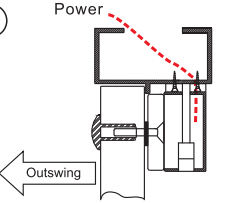
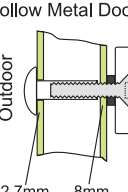
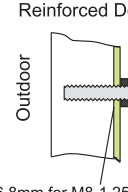
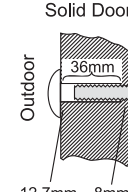
CAUTION

Cautions indicate potentially hazardous conditions, which if not avoided or corrected, may cause minor or moderate injury. Cautions may also warn against unsafe practices.









NOTICE

Notices indicate a condition that may cause equipment or property damage only.

F Regular Installation

<p>①  Fold the mounting template 90°</p> <p>Template</p>	<p>②  Place the template to the proper position of the door and frame. Mark the hole positions of the template on the door and frame.</p>		
<p>③  Drill the holes according to the marks.</p> <p>Frame Door</p>	<p>④  Armature Plate</p> <p>Please install the armature plate as illustrated here. (Dimensions of the holes depend on the door types illustrated below.)</p>		
<p>⑤  Rubber Washer</p> <p>The rubber washer makes the surface of the armature plate adjustable in order to completely fit the surface of magnetic lock.</p>	<p>⑥  Fasten the mounting plate with the mounting screws. The position of the mounting plate should be adjustable.</p>		
<p>⑦  Fix the mounting plate on the door with mounting screws</p>	<p>⑧  Allen wrench</p> <p>Use the Allen wrench and fixing bolts to tighten the electromagnetic lock to mounting plate</p>		
<p>⑨  Power</p> <p>Outswing</p> <p>Connect the power and test the unit.</p>	<p>Hollow Metal Door</p>  <p>12.7mm 8mm</p>	<p>Reinforced Door</p>  <p>6.8mm for M8-1.25 thread</p>	<p>Solid Door</p>  <p>12.7mm 8mm 36mm</p>
<p>Recommendation: For Mini EM-locks (Model 10001), maximum thickness of door is 50 mm. For Maxi EM-locks (Model 10010-254), maximum thickness of door is 46 mm.</p>	<p>Drill a Ø8mm hole through door, on closing side. Enlarge to Ø12.7mm by a sexnut blot on the opening side.</p>	<p>Drill a Ø6.8mm hole and tap on closing side a M8x1.25 thread.</p>	<p>Drill a Ø8mm hole through door on closing side. Enlarge to Ø12.7mm by a sexnut blot on the opening side. The depth is 36mm.</p>

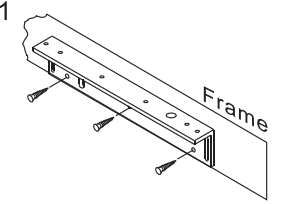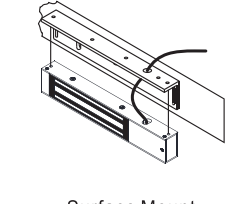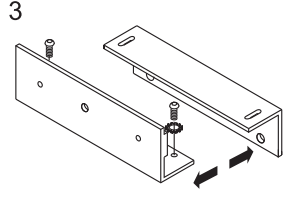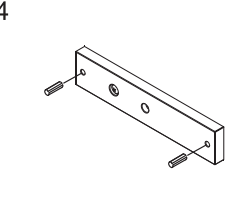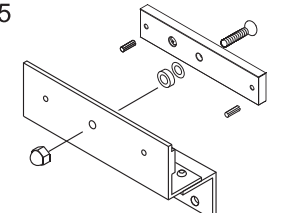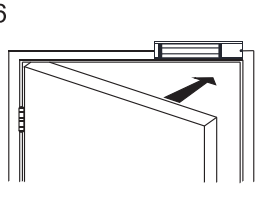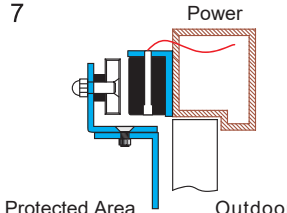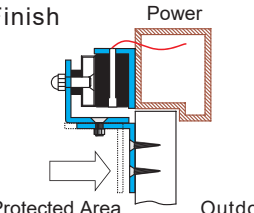
G LZ or Z bracket for inswing doors

<p>1  Frame</p>	<p>2  Surface Mount</p>	<p>3 </p>	<p>4 </p>
<p>Find a mounting position on the door frame for the L bracket. Make sure that the door can still be closed.</p>	<p>Use the fixing bolts to tighten the magnet on L bracket.</p>	<p>Assemble the Z bracket and make sure that the Z bracket is adjustable.</p>	<p>Insert the guide pins into the armature plate.</p>
<p>5 </p>	<p>6 </p>	<p>7  Power</p> <p>Protected Area Outdoor</p>	<p>Finish  Power</p> <p>Protected Area Outdoor</p>
<p>Attach the armature plate and washers to the Z bracket assembly.</p>	<p>Close the door and connect the power.</p>	<p>After the magnet attracts the armature plate, adjust the Z bracket to fit the door.</p>	<p>Fasten the Z bracket to the door.</p>

H Connecting Diagram

POWER SUPPLY

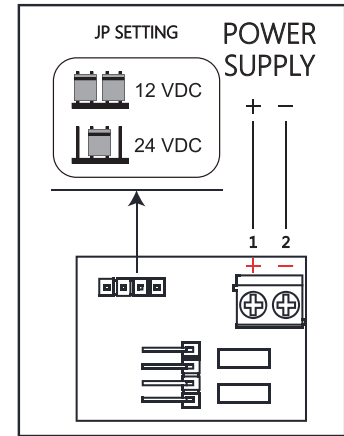The product must be powered from a UL-listed, regulated, power-limited, power supply. If power switch is not wired between DC source voltage(+) and magnet, it will take a longer time to de-energize the magnet simulating residual magnetism. The minimum permissible wire size to be used shall not be less than 22 AWG.




12VDC INPUT

- Required power: 500mA
- Connect positive (+) lead from a 12 VDC power source to Terminal 1.
- Connect negative (-) lead from a 12 VDC power source to Terminal 2.
- Check jumper for 12 VDC operation.

24VDC INPUT

- Required power: 250mA
- Connect positive (+) lead from a 24 VDC power source to Terminal 1.
- Connect negative (-) lead from a 24 VDC power source to Terminal 2.
- Check jumper for 24 VDC operation.

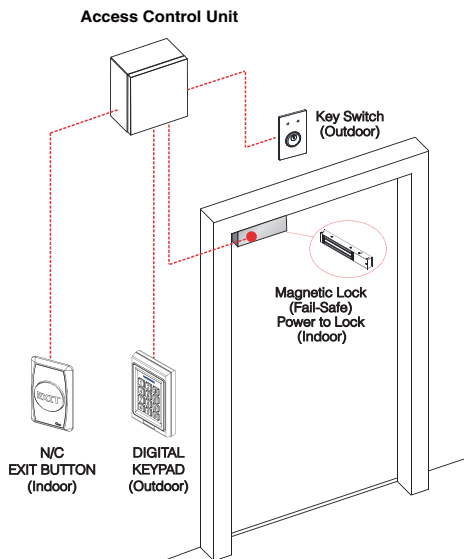Wiring Diagram - Sample wiring and applications




All the field wiring shall in protected area
* For example, if the building is in a fire, the fail-safe lock will automatically unlock, allowing personnel to escape quickly.

Contact With Fire Alarm



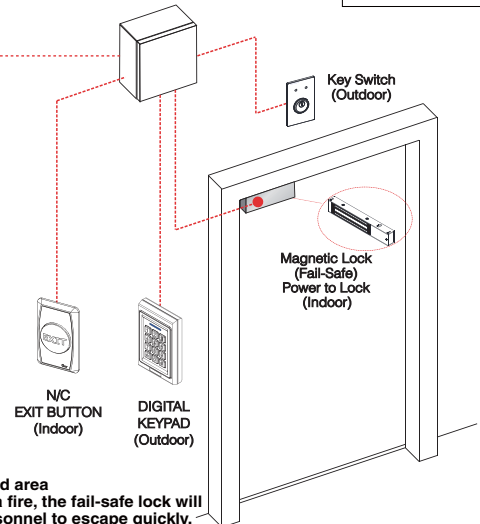Access Control Unit



Note: In order to use this equipment with fire alarm system, the end product must be listed to UL864

All the field wiring shall in protected area
* For example, if the building is in a fire, the fail-safe lock will automatically unlock, allowing personnel to escape quickly.

I Trouble Shooting

Problem	Possible Cause	Solution
Door does not lock	No power	Make sure the wires are connected properly Check that the power supply is connected and working properly Make sure the lock switch is wired correctly
Low holding force	Poor contact between electromagnet and armature plate	Check if the armature plate is deformed? Make sure if the rubber washer was used between magnet lock and armature plate. Make sure the contact surfaces of the electromagnet and armature plate are clean and free from dust and foreign material.
	Low voltage or incorrect voltage setting	Ensure the electromagnet lock is set for the correct voltage. Check for proper voltage at the electromagnet locks input. If low determine if the correct wire gauge is being used to prevent excessive voltage drop.