



## Bracket LZ-300

## **Inswing doors**

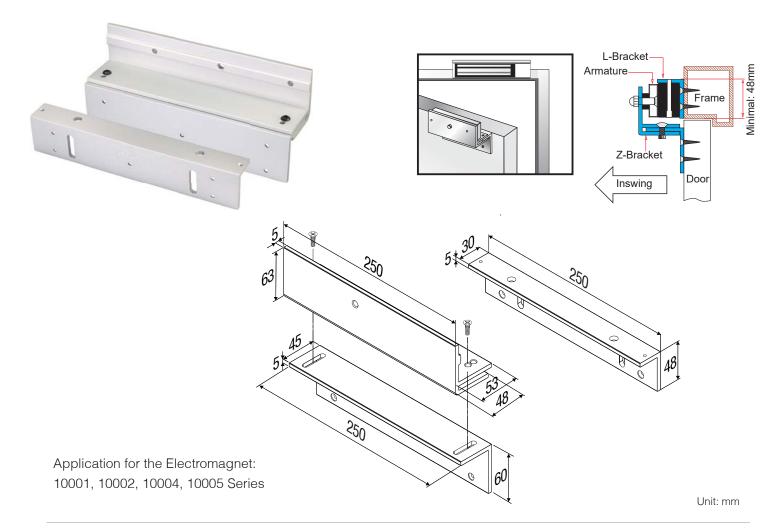





## With LZ bracket for inswing doors




Find a mounting location on the door frame for the L bracket. Make sure that the door is still closeable.




Use the fixing bolt to tighten the electromagnet lock on the L bracket.




Assemble the Z bracket, and make sure that the Z bracket is adjustable.




Insert the quide pins into the armature plate.

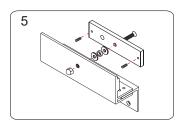


Assemble the armature plate and the Z bracket. (Must add rubber washer)



Close the door and connect the power.



Test the tightness and adjust the Z bracket to fit the door.



Lock tighten the Z bracket