


# RTS-870

## Wave Sense Infrared Exit Devices


### Installation Instructions

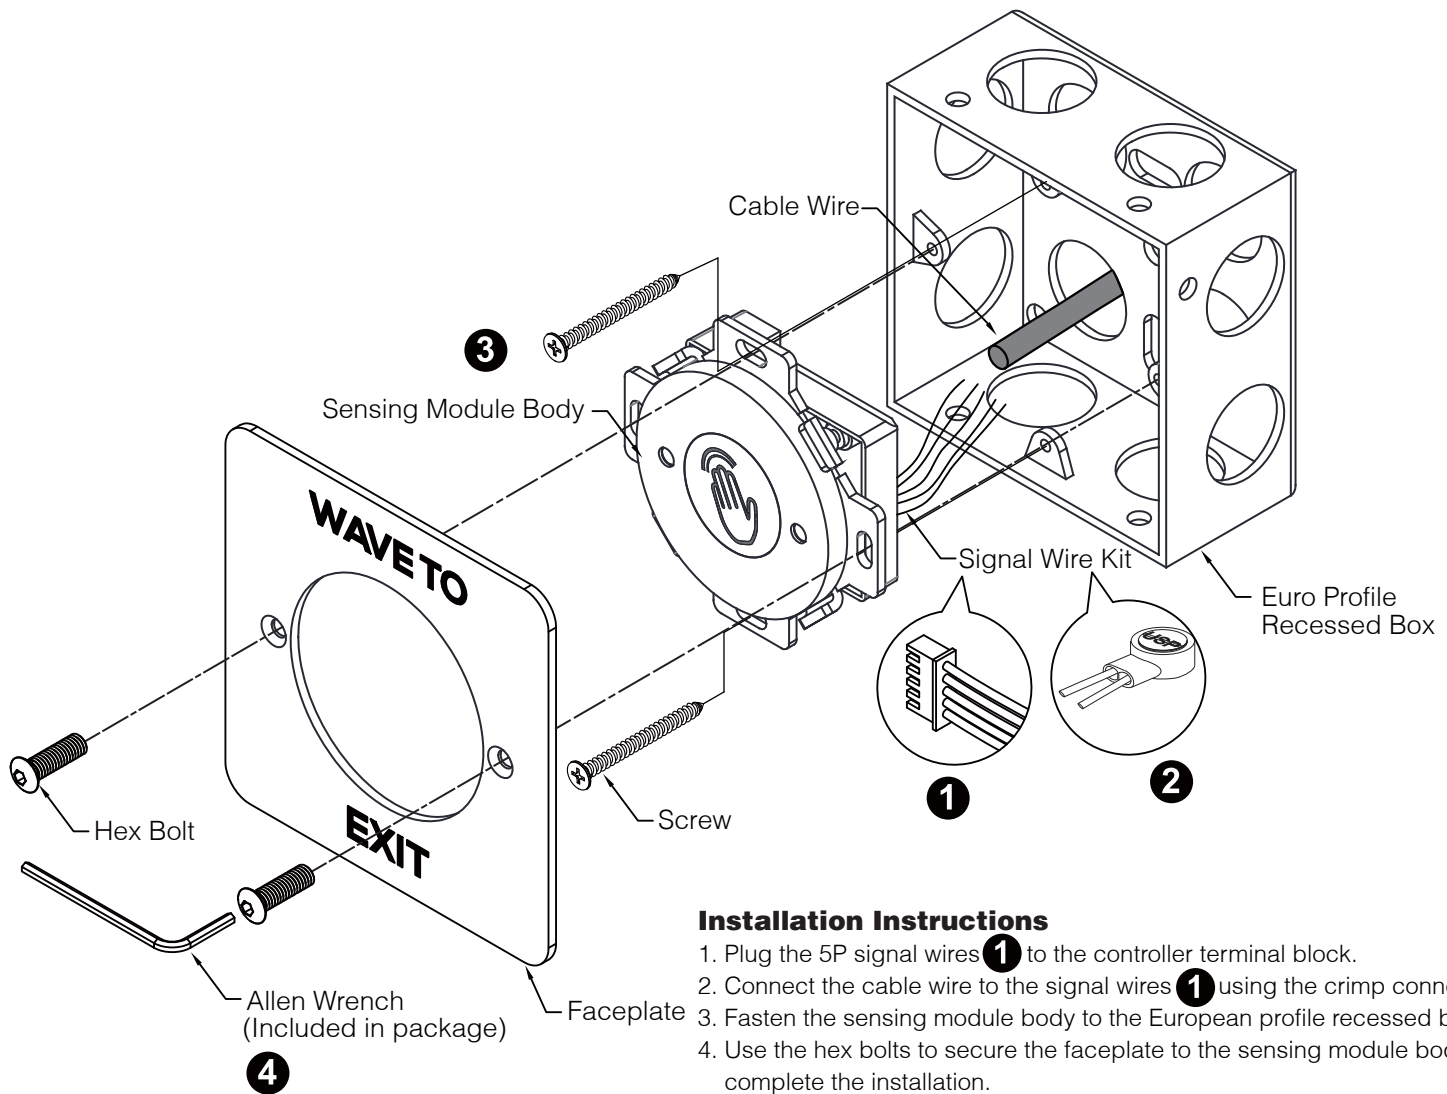

### Butt Splice(IDC) Connector

#### How to use


**1**

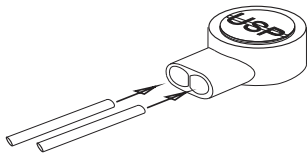

Insert the wire leads into connector's holes




**2**

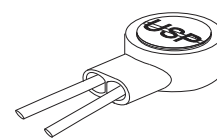

Make sure the wires are reached to the end of bottom



**3**

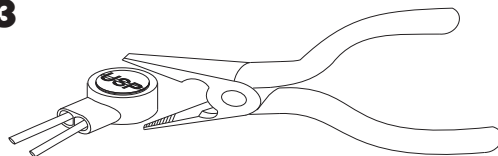

Using crimper or pliers and pressing the header of connector down to even position