

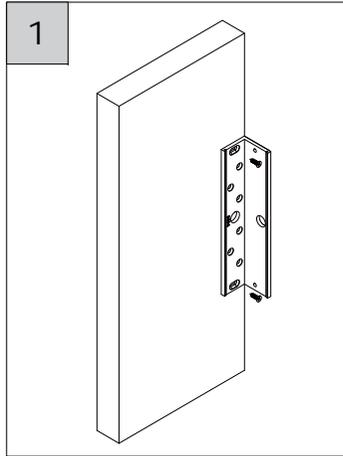



SMB-GK1276 Surface Mount Box

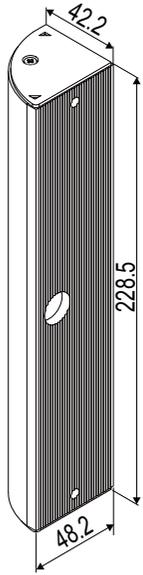


1
Align the bracket with edge of the door leaf and use the screws provided to secure the bracket (through the top and bottom screw holes).

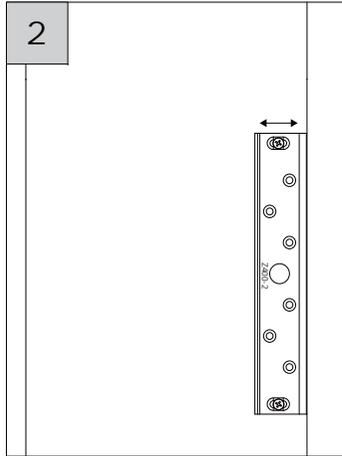


2
Horizontal adjustable range is 8mm for better precision.

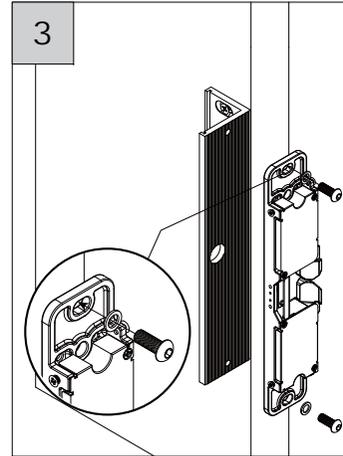


3
Secure the rim mount strike to the bracket through the adjustable screw holes as indicated.

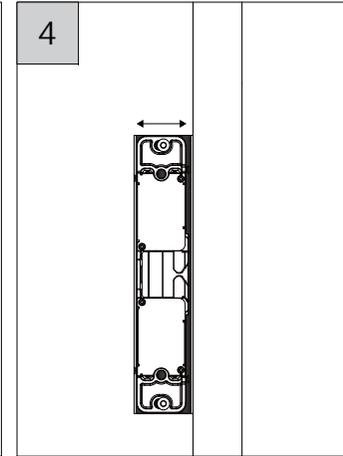


4
Horizontal adjustable range is 3.5mm.

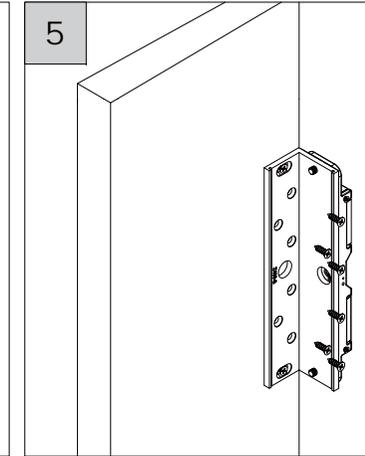


5
Use the screws provided to secure the bracket to the door leaf.

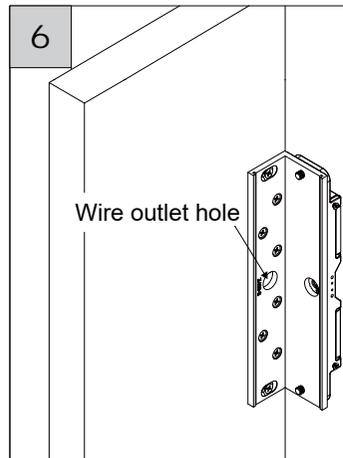


6
Drill a 6mm wire outlet hole.

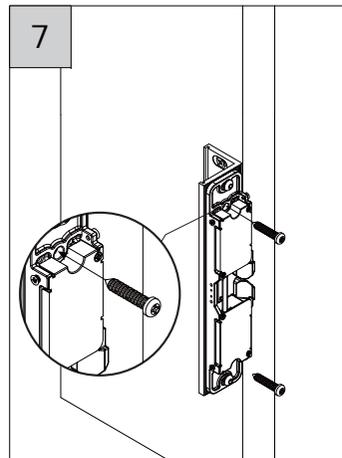


7
Secure the rim mount strike to the bracket as indicated.

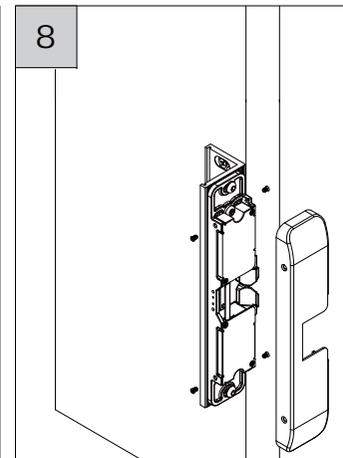


8
Secure the top cover of the rim mount strike.

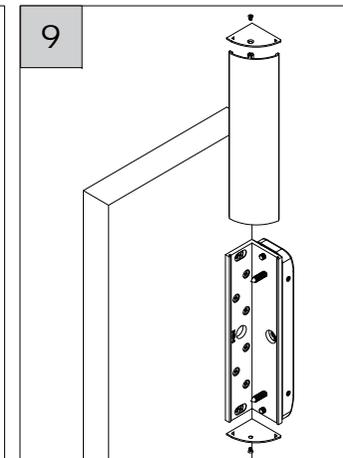

9
Secure the side and top cover of the brackets.

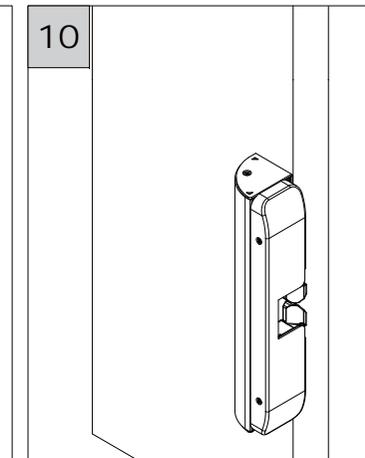

10
Installation is now complete.

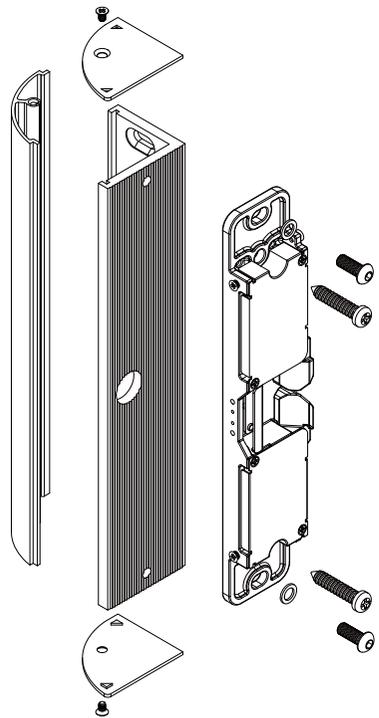

The rim mount strike is not included.