
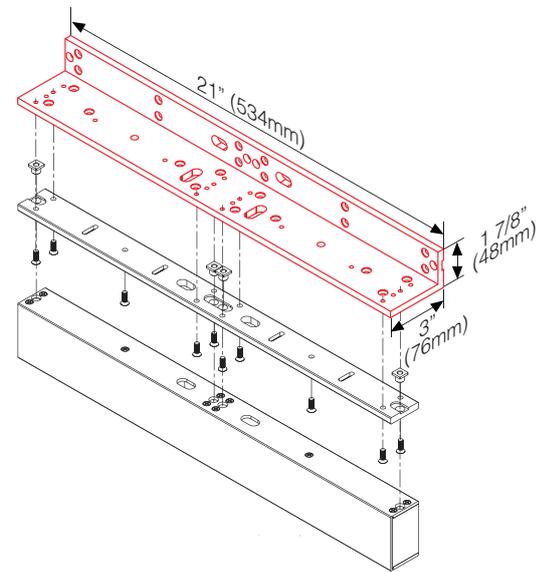


Outswing narrow frame doors

L-GEM-D1200 Bracket


The A value in the table below shows the minimum requirement distance of the door frame for different electromagnetic lock model.

Magnet Grade	A Value	Optional Brackets
600 LBS	42 mm	L-GEM-D600
800 LBS	48 mm	L-GEM-D800
● 1200 LBS	60 mm	L-GEM-D1200

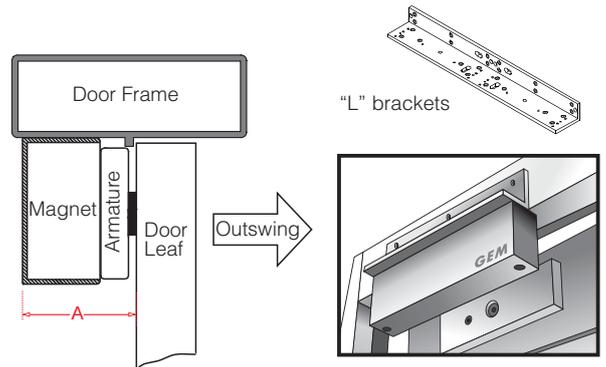


Application for the Electromagnet: GEM-D1200 Series


Installation of L bracket on Outswing Doors

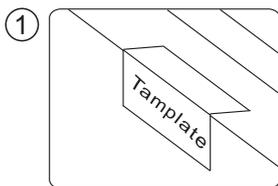


1 Fold the mounting template 90° angle along the dotted line.

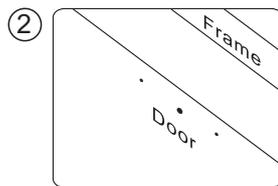


2 Drill the holes marked on the template.

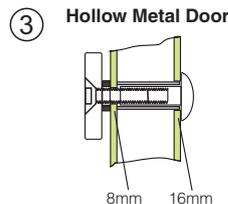


3 Hollow Metal Door
Drill a hole 8 mm in diameter through the door. Enlarge the hole to 16 mm from outside.

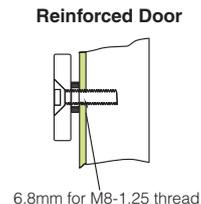


3 Reinforced Door
Drill a hole 6.8mm in diameter from inside. Screw with a M8-1.25 thread.

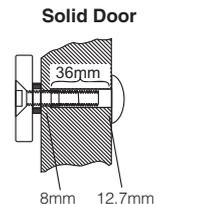


3 Solid Door
Drill a hole 8mm in diameter through the door. Enlarge the hole to 12.7mm from outside. The thickness of the door is 36mm.

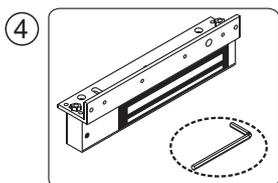

4 Assemble the electromagnet and L bracket with an Allen wrench.

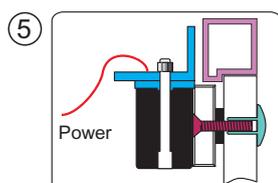


5 Turn on the power of electromagnet. Let the electromagnet and the armature plate bond together. Press L bracket against the door frame.

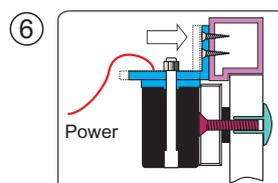

6 Fasten L bracket on the door frame.

Finish

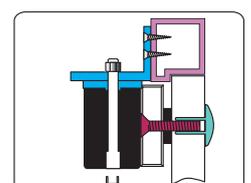

6 Test the unit. Tap the plugs into the electromagnet