



WLP-100 Wireless Power Transfer Installation Instruction

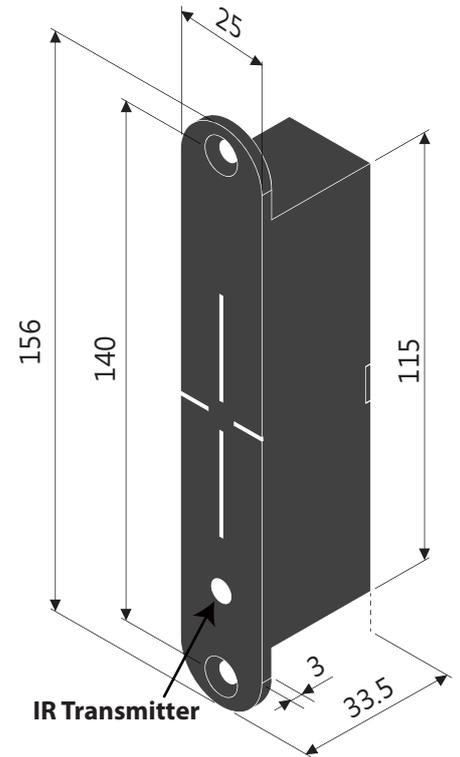

Unit: mm

Specifications

| Transmitter on Frame Side | |
|---|---|
| Input Power | 27.6 VDC |
| Current Draw | 1A/27.6VDC *Requires 1.5 A power when energized |
| Lock Status Output | Relay (Dry contacts: N.O./N.C./Com.) Rating: 1A/ 30VDC |
| Door Status Output | Reed Switch (Dry contacts: N.O./N.C./Com.) Rating: 0.1A/ 20VDC |
| Receiver on Door Side | |
| Output Power | 12/24 VDC |
| Current Draw | 800mA/12VDC 400mA/24VDC |
| Lock Status Input | Dry contacts: N.O./Com. |
| Infrared Sensing | Transmitter ⇔ Receiver |
| Door Opening Time | 15 / 30 seconds *For fail-secure locks only |
| Maximum Door Gap | 3/16" (4~5mm) |
| Maximum Tolerance with 3/16" (4~5mm) Door Gap | Horizontal alignment : 1/16" (1mm) Vertical alignment : 1/16" (1mm) IR Sensing: 1/16" (1mm) |
| Operating Temperature | 32° to +120.2°F (0° to +49°C) |
| Humidity | 0 to 85% Non-condensing |

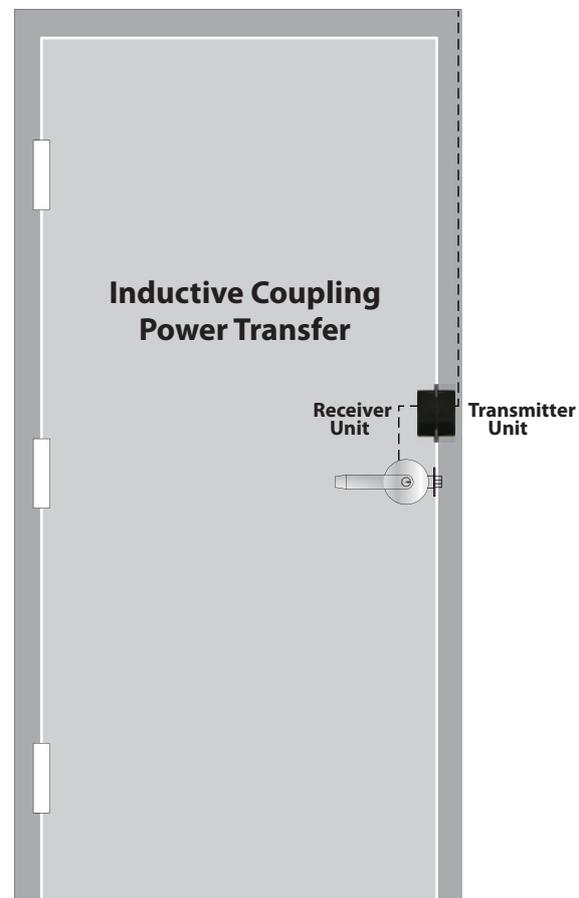

Installation & Wiring

Included in Package

- Door Side Unit
- Frame Side Unit
- Door Side Template
- Frame Side Template
- Wood Screws
- Metal Screws
- Mounting Tabs
- Washers


Note: For optimal performance, it is recommended to minimize the door gap and use the supplied templates. The WLP-100 allows for some horizontal and vertical misalignment. Tolerance for minor misalignment will increase as door gap decreases.

Installation Steps


1. Door & Frame Inspection

After checking the door and frame conditions, apply the templates at the appropriate location. The WLP-100 can be installed on the latch side, hinge side, or top of the door.

1a. Apply the door side template.

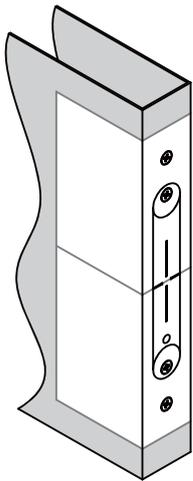


1b. Apply the frame side template. Make sure to align the horizontal and vertical centerlines.

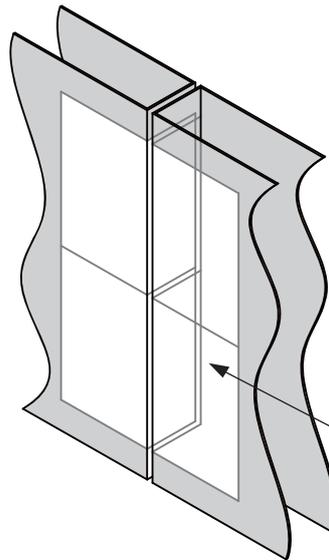


Align the centerline on the template.

2. Metal Door Installation


2a. Center punch the screw locations for mounting tabs and counter-sink for M5 screw.

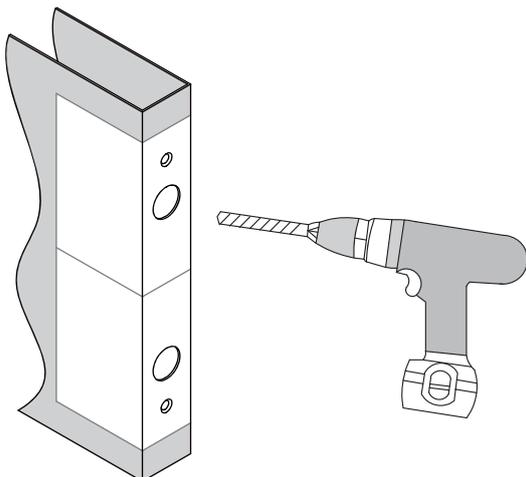


2b. Cut out the main body on the door.

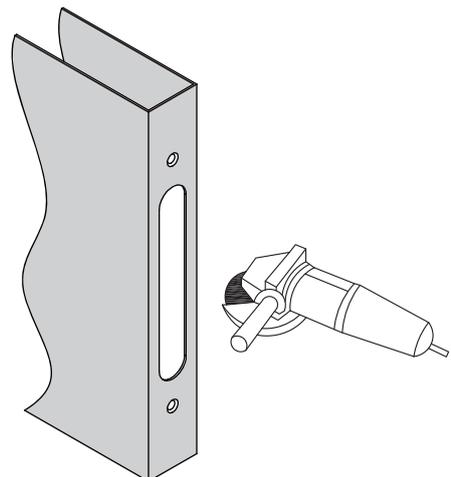

2c. Check if the WLP-100 fits well in the cutout and use the file if necessary.

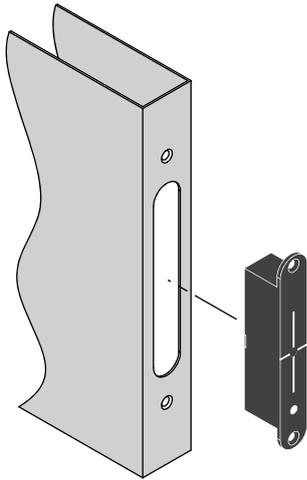


2d. Install mounting tabs using M5 screws.

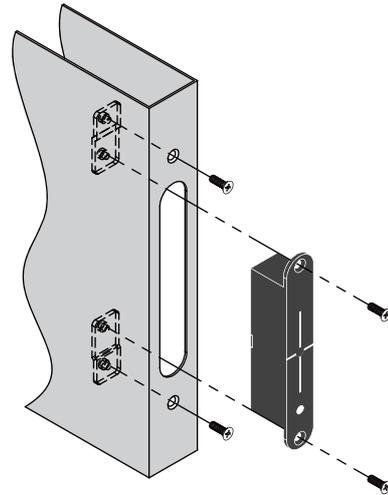


3. Wood Door Installation


3a. Drill two 1" (25mm) diameter holes, 1/8" (3mm) in depth as shown on the template.

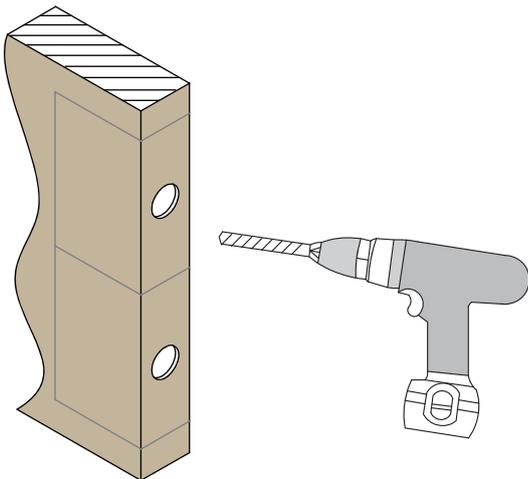


3b. Drill and cut the WLP-100 main body to a minimum depth of 1-9/16" (40mm), and diameter of 1" (25mm) on the door side.

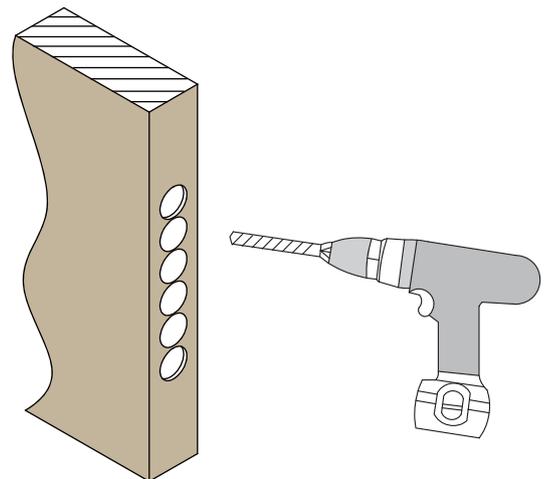


3c. Use the chisel to straighten the sides.

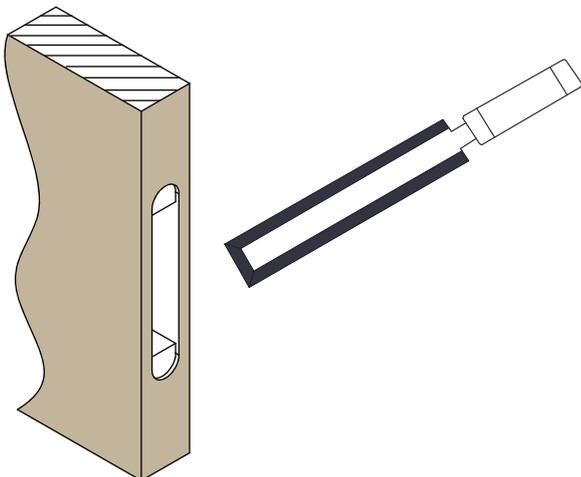

3d. Check if the WLP-100 fits well in the cutout and use the file if necessary.

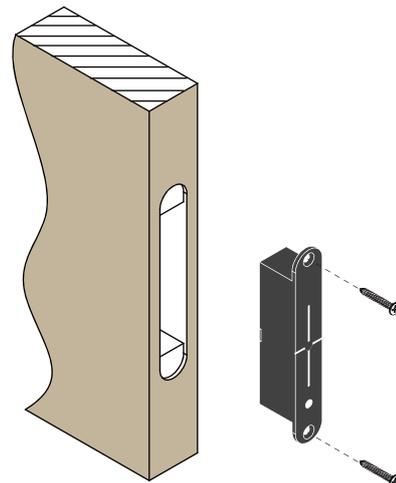


3e. For the door side unit, drill a wiring channel to the electrified device to be powered.

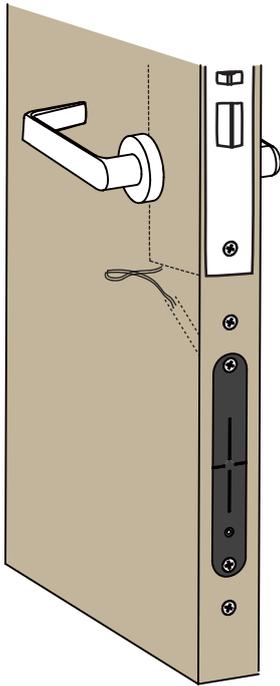

4. Selecting the Lock Output Voltage

Use the jumper on the back of the door side unit to select the appropriate lock voltage.


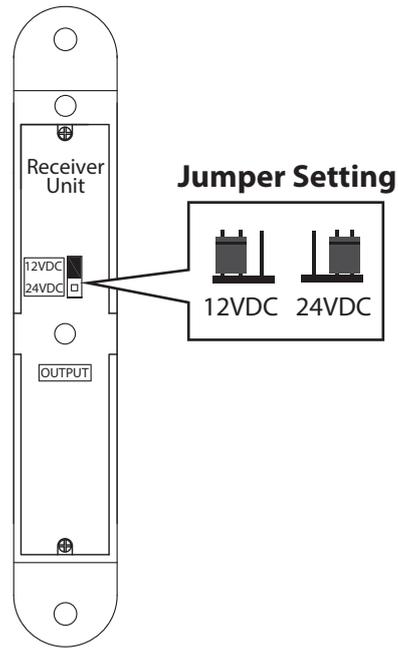


5. Frame Installation


For the frame side unit, repeat steps 2 or 3 to install on a metal or wood frame.

Wiring Instructions


Please refer to the wiring diagrams on page 5, 6.
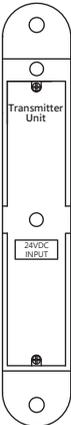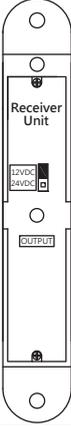
| WLP-100 | | Pigtail | Wire Color | Function |
|---|----------------------|----------------------------|------------|---|
|  | Frame (Transmitter) | Input Power | Red (+) | 27.6VDC / 1.5Amp |
| | | | Black (-) | Ground |
| | | Reed Switch | Red | N.C. |
| | | | Black | COM. |
| | | | White | N.O. |
| | | Relay Output (Lock Status) | Yellow | N.C. |
| | | | Green | COM. |
| Blue | N.O. | | | |
|  | Door Leaf (Receiver) | Lock Status Input | Blue | N.O. |
| | | | Green | COM. |
| | | Lock Power Output | Red (+) | 12 or 24VDC (select through jumper setting) |
| | | | Black (-) | |

WLP-100 Wiring Diagram (1)

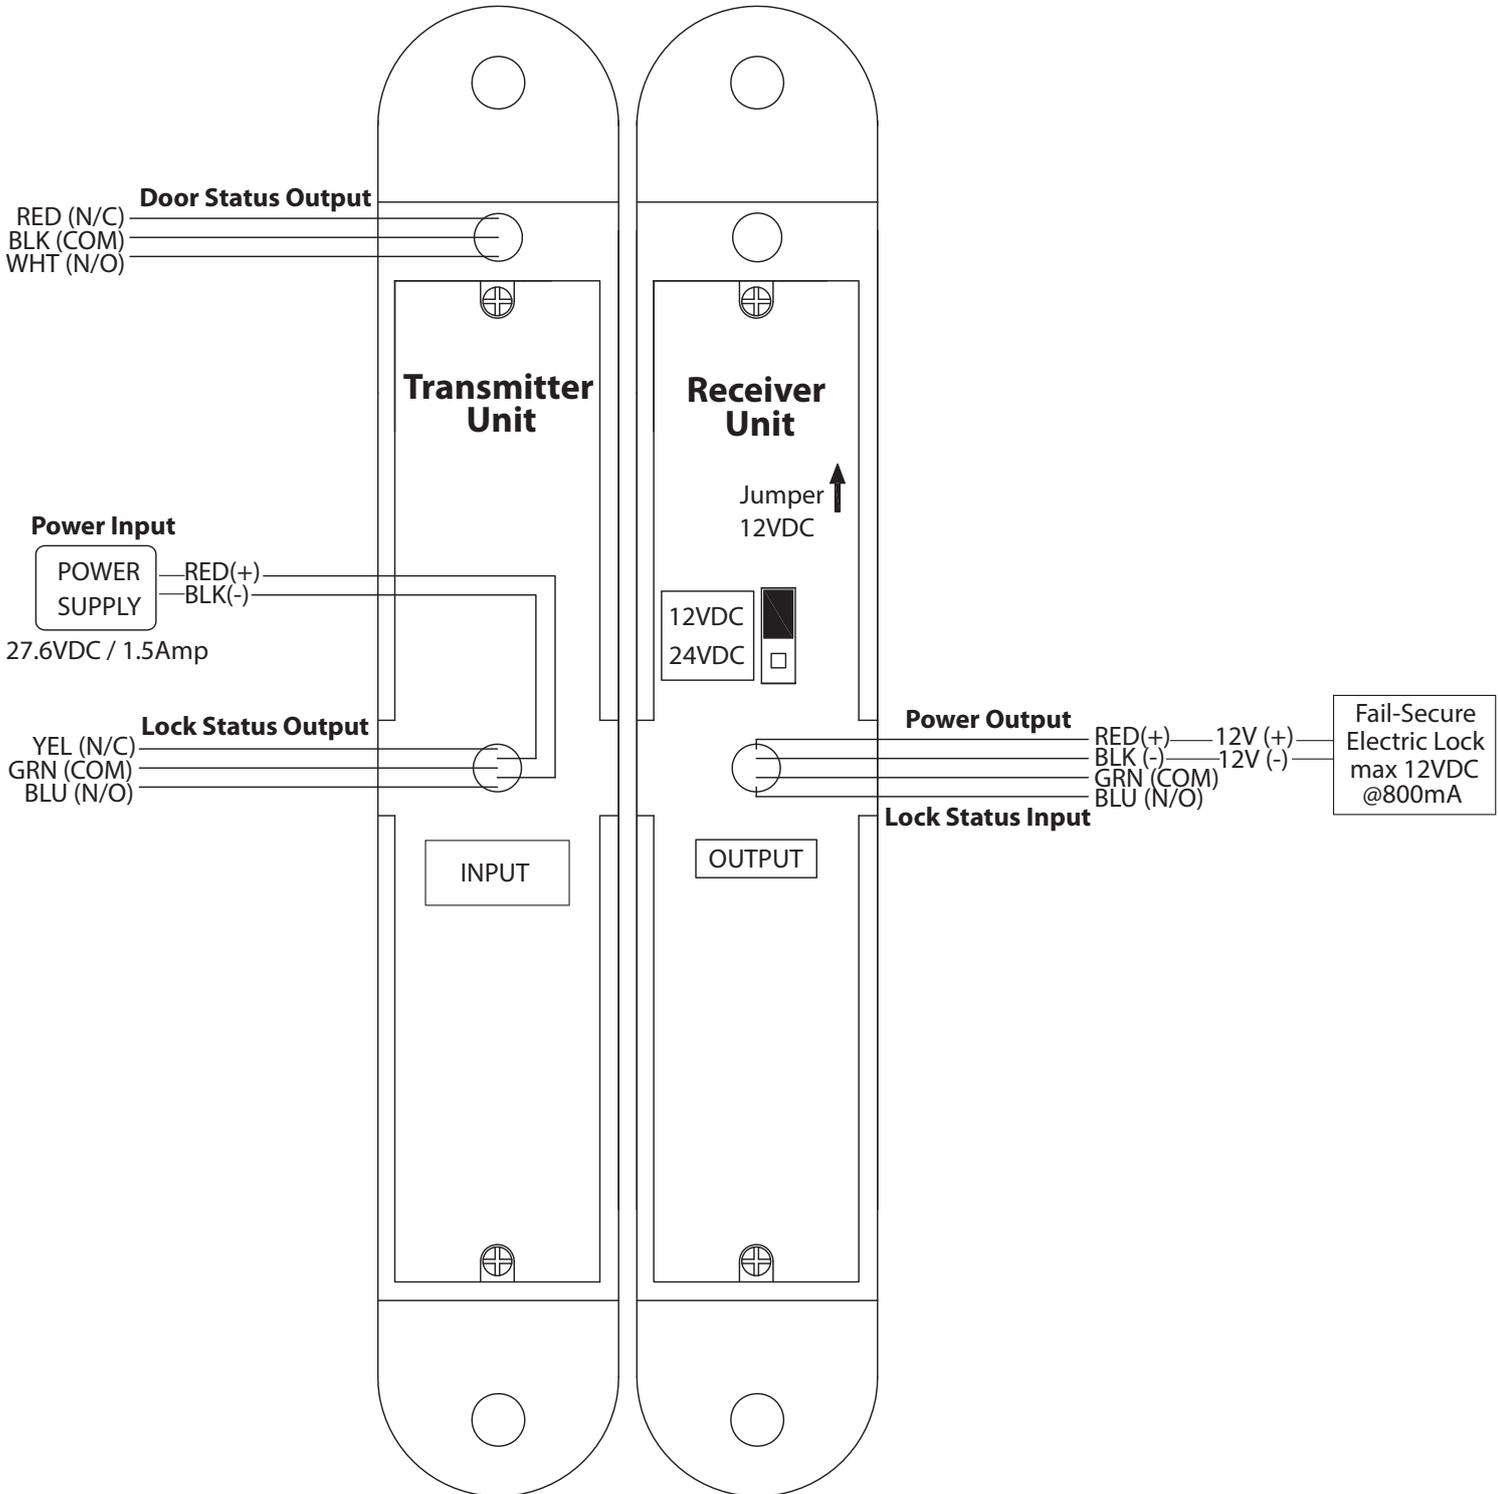

WLP-100 Wiring Diagram (2)

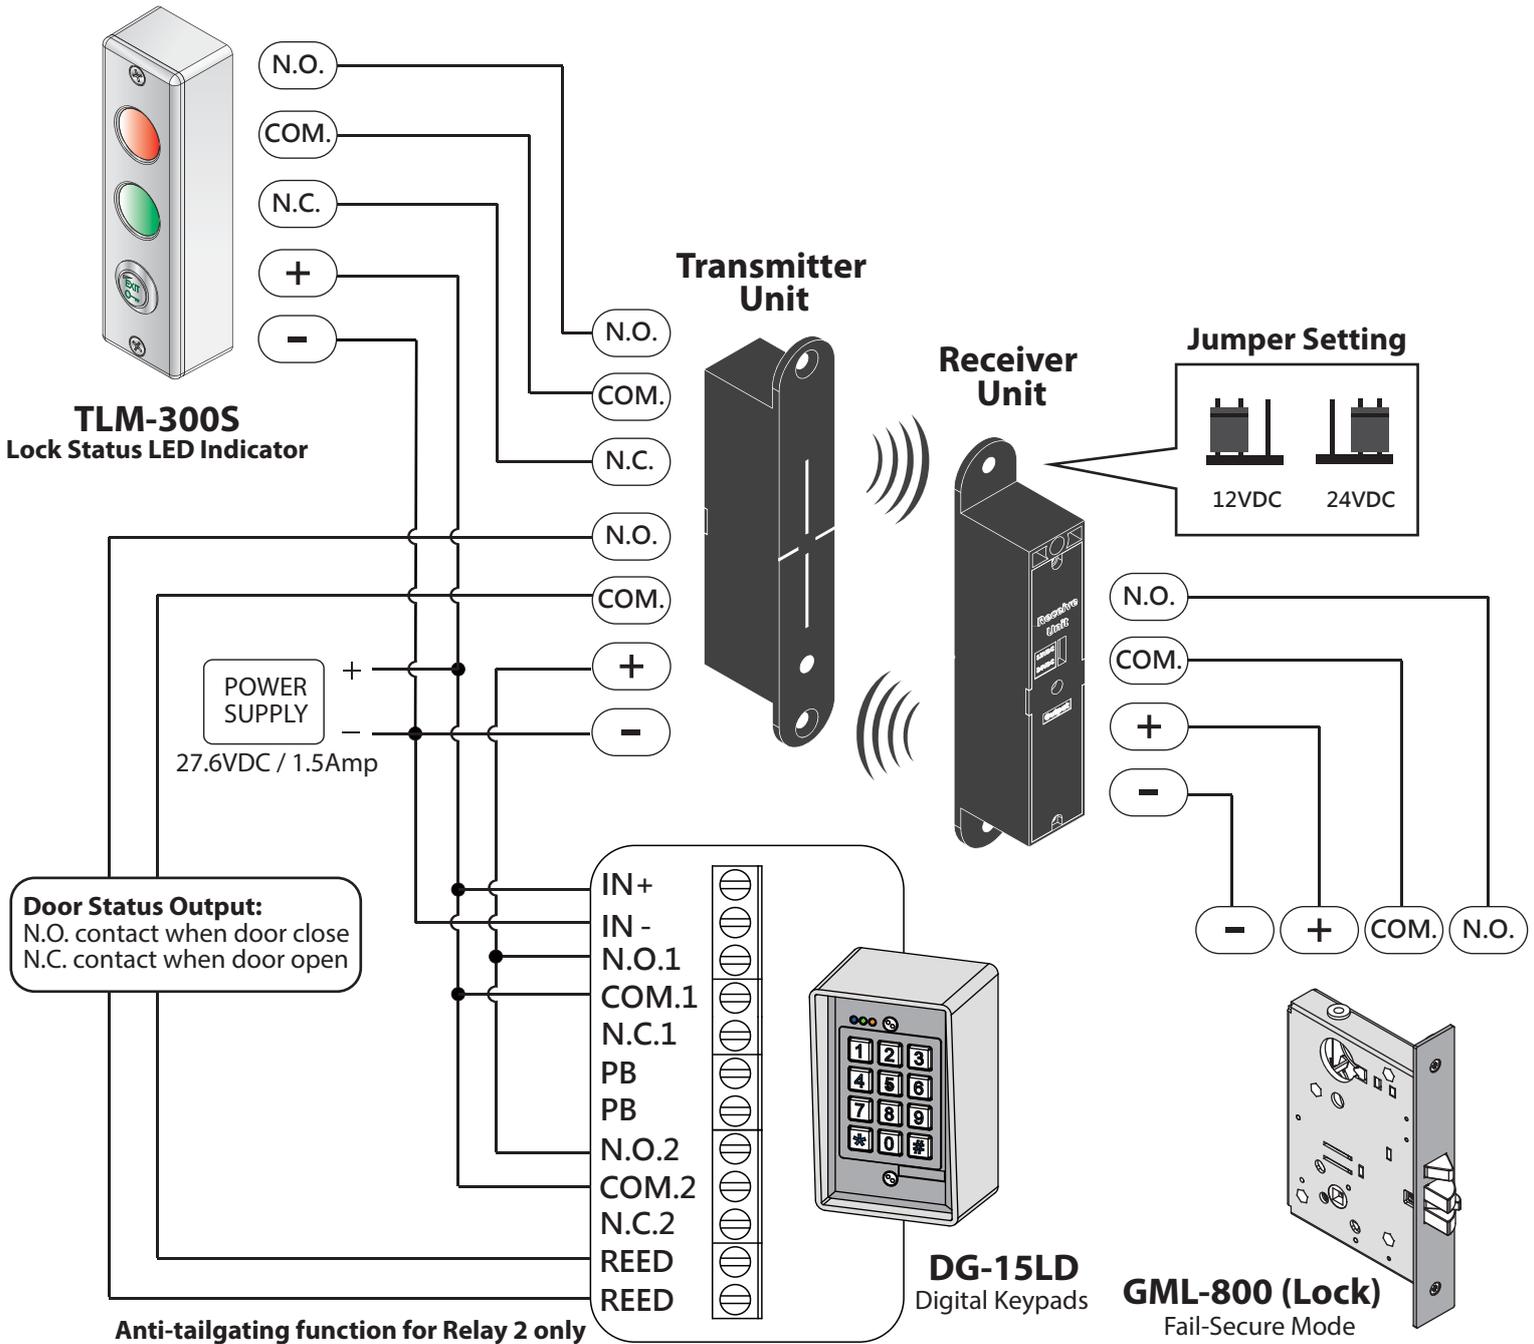

| Problem | Possible Cause | Solution |
|---|---|---|
| Unable to unlock (Transmitter) | No power | Check that the power supply is connected and works properly Make sure access control relay contact is wired correctly (N.O.) Check jumper settings are correct Check door opening time is not too long (the interval time is 30 seconds) |
| Insufficient power output (Both) | Installation position is incorrect | Check installation position/alignment is correct Check door gap does not exceed maximum recommended distance (Package including washers for minimizing gap) |
| No sensor output (Both) | No door status output | Check installation position/alignment is correct |
| | No lock status output | Check installation position/alignment is correct Make sure lock status wires are connected to wireless power source |